




Proper Needle Insertion into QualiTru™ Septum

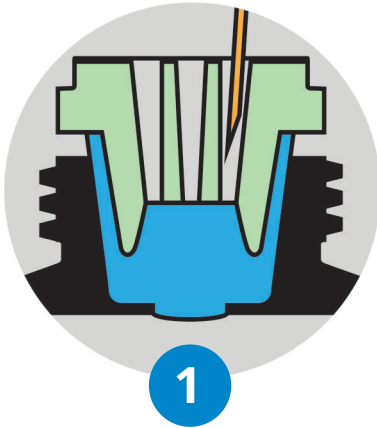


1
Line the hypodermic needle up with the channel you plan to use.

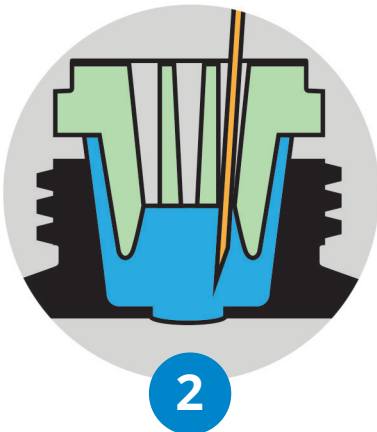


2
Face the bevel of the needle outward, or toward the outer ring.

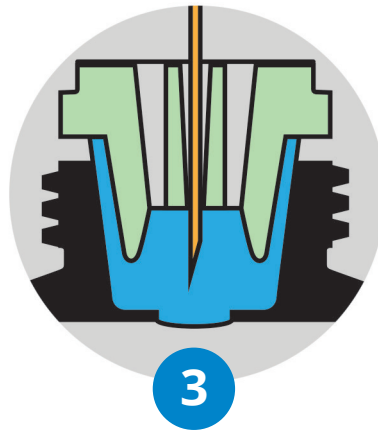

3
Slowly push the hypodermic needle until you meet resistance.

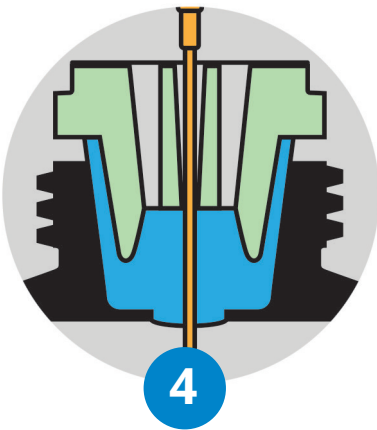


4
Gently continue through the rubber until you can push no further.

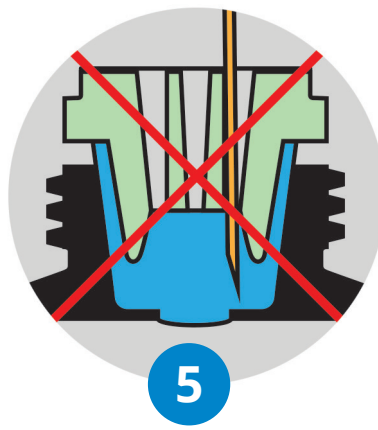


5
Do not spin or twist on the way through, as you could core the rubber.


Inserción correcta de una aguja en el tabique QualiTru™

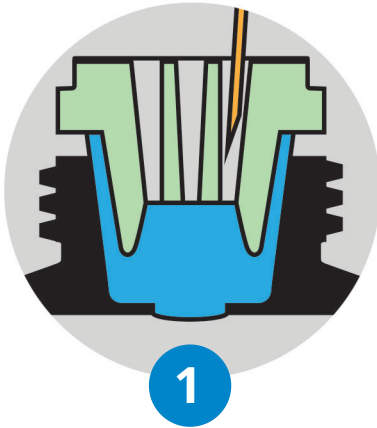


Alinee la aguja hipodérmica con el canal que planea usar.

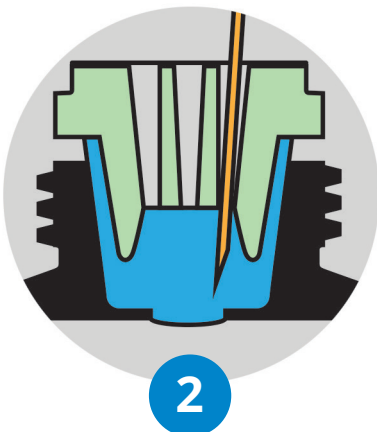


Coloque el bisel de la aguja en dirección hacia afuera o hacia el anillo exterior.

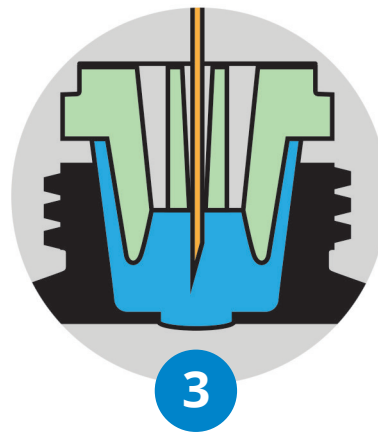

Empuje lentamente la aguja hipodérmica hasta encontrar resistencia.

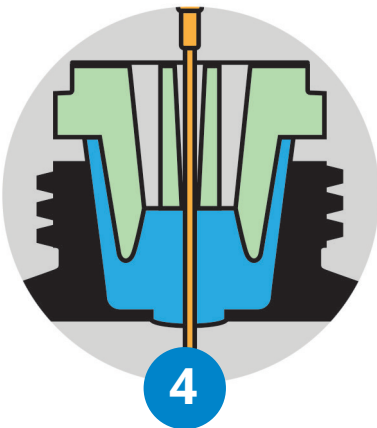

Suavemente, continúe empujando a través de la goma hasta que ya no pueda hacerlo.

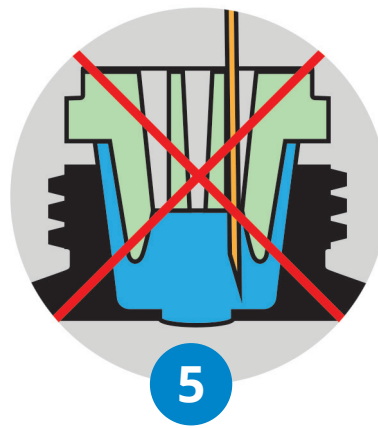

No gire ni haga un movimiento de rotación a medida que atraviesa la goma, ya que podría desprenderla.